


Product Selection Decision Tree

Sample Risk Assessment Indicators:

- Limited ability to reposition self
- Braden score of 18 or less
- Braden Moisture subscore of 1 or 2
- Braden Mobility subscore of 1 or 2
- Braden Friction and Shear subscore of 1 or 2
- Existing or history of pressure injuries

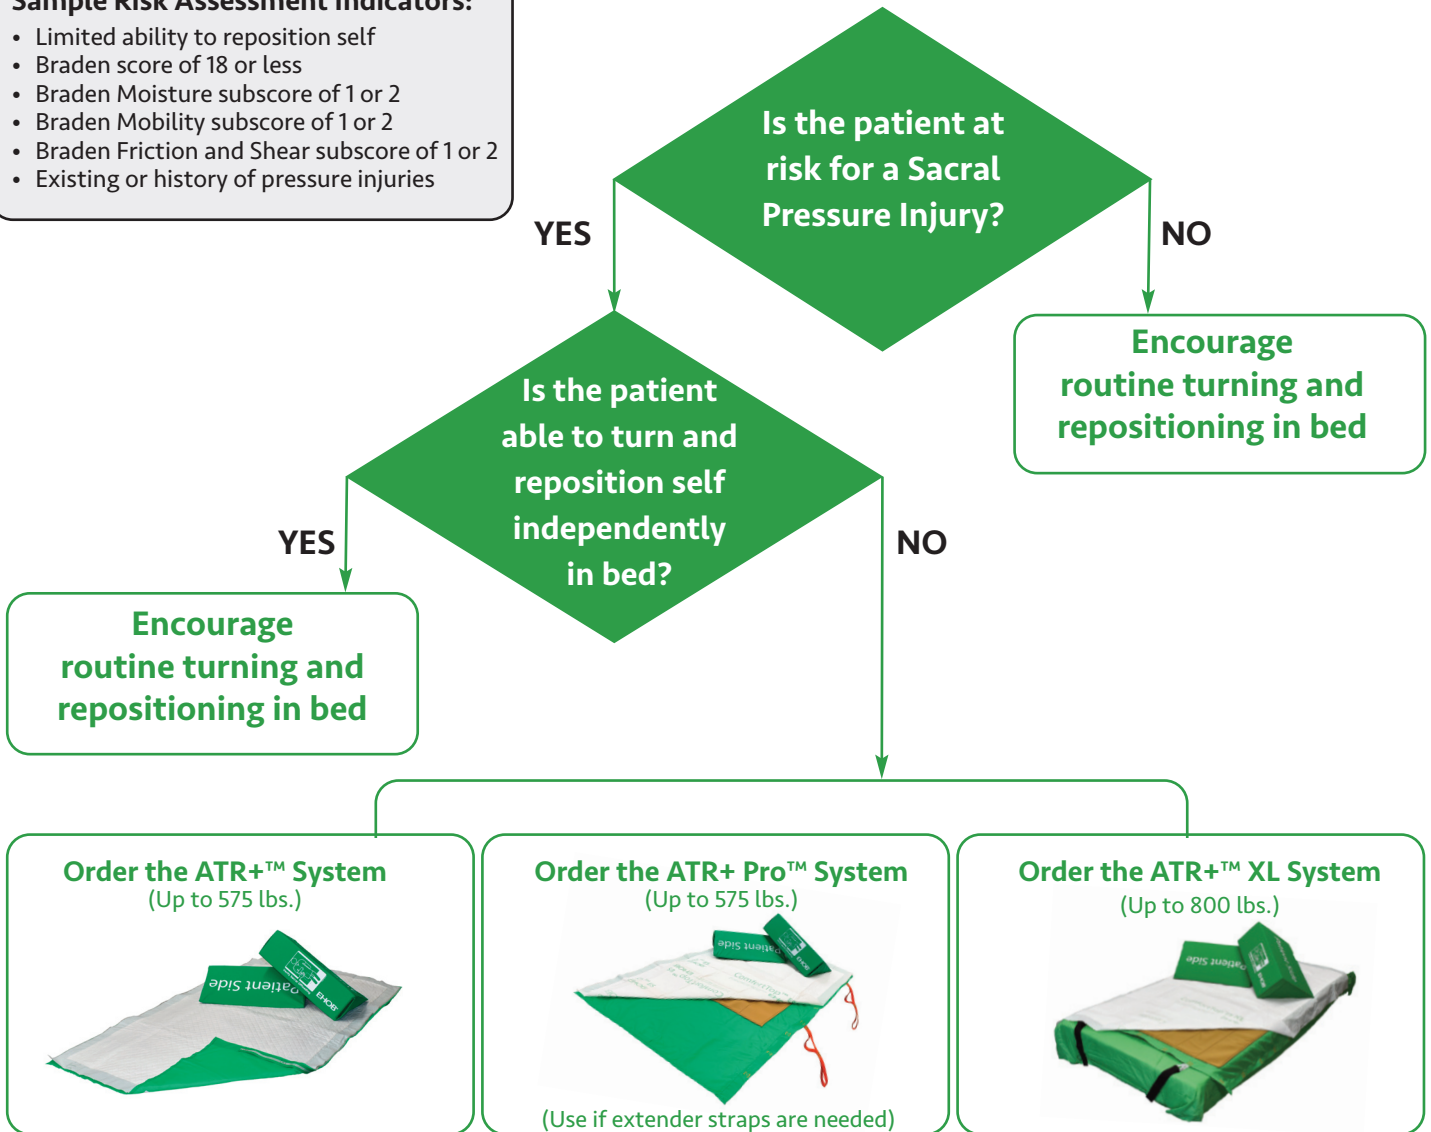

- Wedges are properly positioned when you can slide your hand between them and verify the sacrum is offloaded
- Turn and reposition the patient every 2 hours or per individualized turning schedule
- ComfortTop® ES Absorption Pad should be disposed of when soiled and replaced with a new pad
- Consider Position Perfect® Wedges XL, if needed
- Send product(s) with patient at discharge